Quick Installation Guide

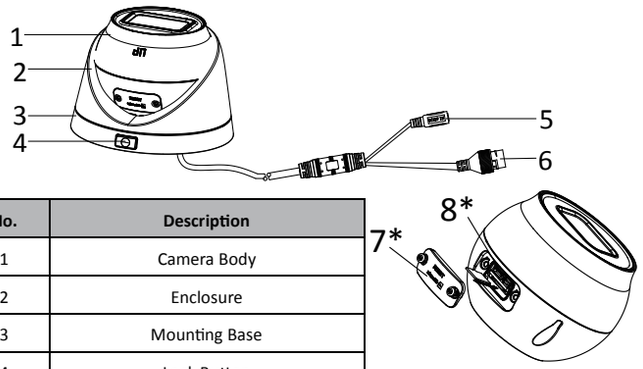

No.	Description
1	Camera Body
2	Enclosure
3	Mounting Base
4	Lock Button
5	Network Interface
6	Power Interface
7*	Memory Card Slot Cover
8*	Reset Button

Installation Ceiling Mounting Steps:

1. Install the Memory Card

1.1 Rotate the camera body to completely expose the memory card slot

1.2. Loosen the screws to remove the memory card slot cover.

1.3. Insert the memory card into the slot, and push to get it mounted.

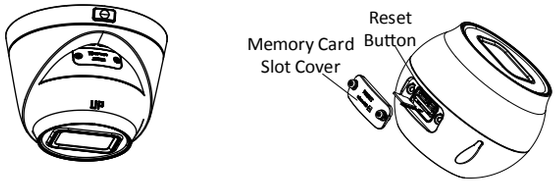

1.4. To unmount the memory card, push to eject it.

1.5. Fix the screws to replace the slot cover.

2. Ceiling Mounting

2.1. Disassemble the camera by pressing the button on the camera.

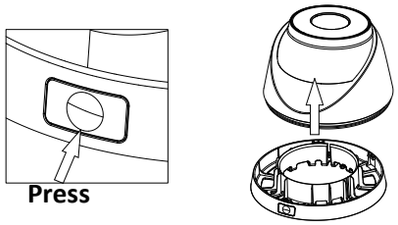

2.2. Paste the supplied drill template to the desired mounting position on the ceiling.

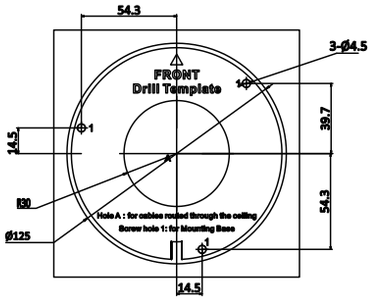

2.3. Drill the screw holes in the ceiling according to the drill template.

2.4. (Optional) If you want to route the cables inside the ceiling, drill a cable hole in the ceiling according to the adapter plate.

2.5. Fix the mounting base on the ceiling with supplied screws.

.Notes:

- In the supplied screw package, both self-tapping screws, and expansion bolts are contained.
- If the ceiling is cement, expansion bolts are required to fix the camera. If the ceiling is wooden, self-tapping screws are required.

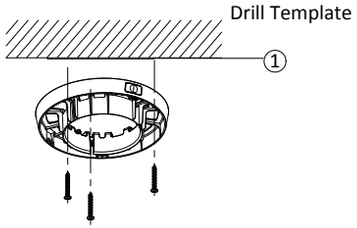

2.6. Route the cables through the cable hole or the side opening.

2.7. Install the camera body back to the mounting base.

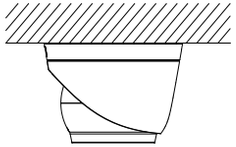

2.8. Rotate to adjust the surveillance angle.

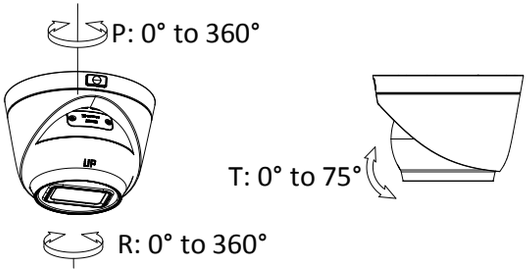

Press Reset button for about 10s when the camera is powering on or rebooting to restore the default settings, including the user name, password, IP address, port No., etc.

For detailed instructions of further configuration, please refer to the user manual of network camera.