




Bullet Type VIII Network Camera

Quick Installation Guide

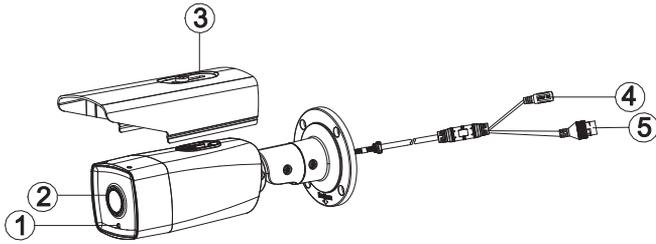

No.	Description
1	ICR
2	Lens
3	Sun Shield
4	Power Cable
5	Network Cable

2. Hammer the supplied plastic expansion bolt into the screw holes.
3. Route the cables to the cable hole and connect the corresponding power cable and video cable
4. Fix the camera to the wall (or ceiling) with the supplied screws

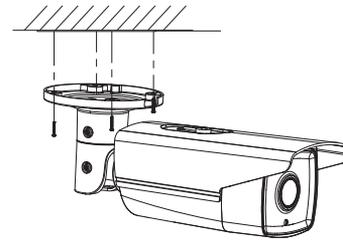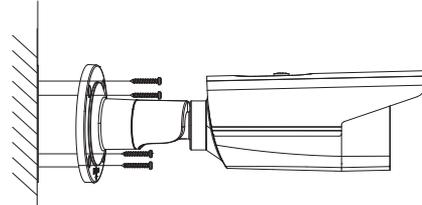


Installation

Note:

Please make sure that the wall is strong enough to withstand three times the weight of the camera.

Steps:

1. Drill the cable hole and the screw hole in the ceiling according to the supplied drill template.

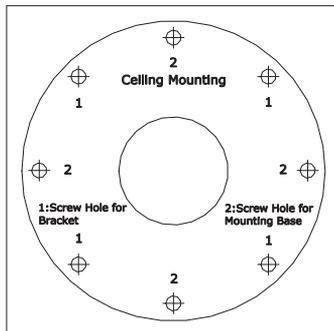

5. Adjust the surveillance angle.

- 1). Loosen No.1 adjusting screw to adjust the panning position [0° ~ 360°].
- 2). Tighten No.1 adjusting screw.
- 3). Loosen the No.2 adjusting screw to adjust the tilting position [0° ~ 100°].
- 4). Tighten No.2 adjusting screw.
- 5). Loosen No.3 adjusting screw to adjust the azimuth angle [0° ~ 360°].
- 6). Tighten No.3 adjusting screw.

