


Magnetic Lock (500kg)



Specification

Model	Size(unit:in)	Voltage	Current	Holding Force	Signal Output	Door
LTKL212	10.43Lx2.94Wx1.52H	12/24VDC	12V/420mA 24V/210mA	500kg(1200Lbs)	No	Single Door
LTKL212D	20.9Lx2.94Wx1.53H	12/24VDC	12V/420mA \times 2 24V/210mA \times 2	500kg \times 2(1200Lbs \times 2)	No	Double Door



Diagram (unit:in)

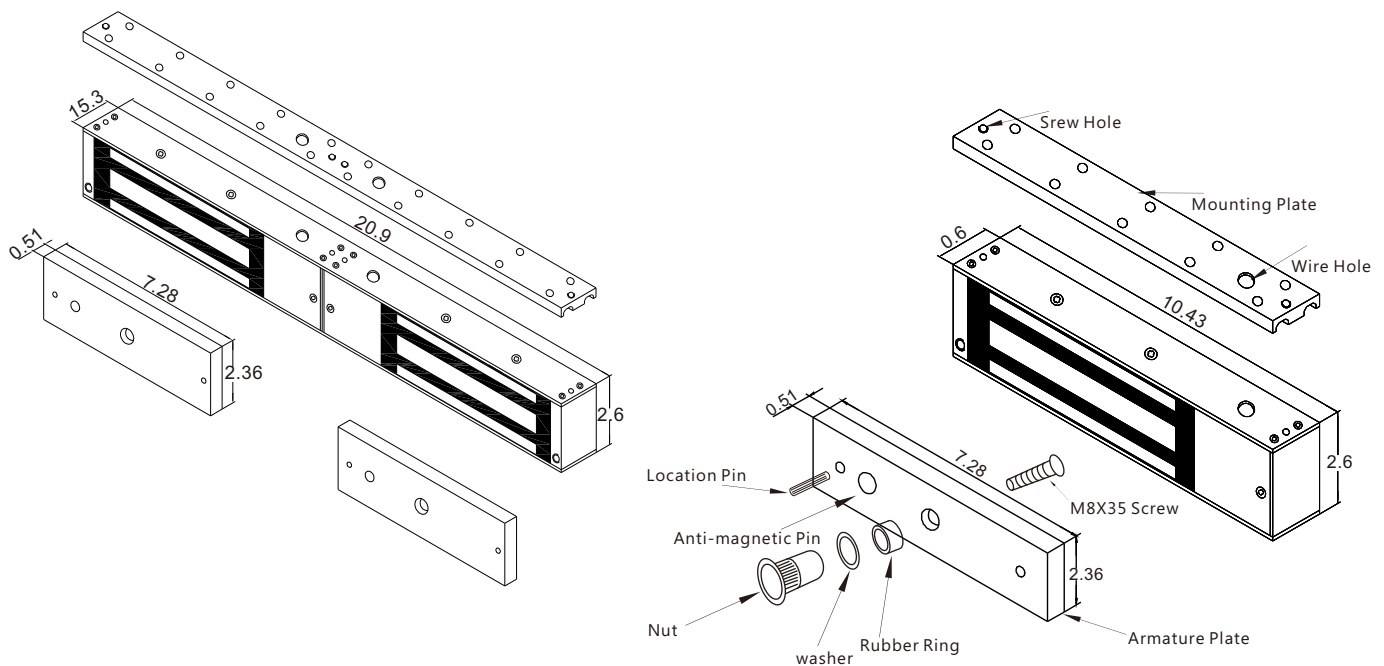


Cautions:

- The screw of armature plate should not be fixed too tight. Proper elasticity should be guaranteed for the rubber ring so that the armature plate can adjust itself to the appropriate position.
- Check the jumper's position before connecting. Figure out it represents 12VDC or 24VDC.
- Please keep the surface of the lock clean, or the force will be reduced because of the dust, glue or scotch tape on it.


Installation

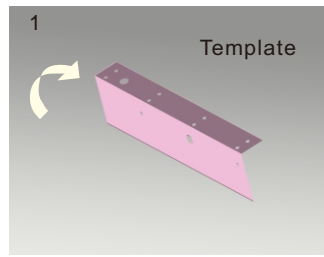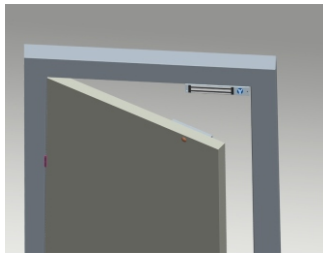


1 Fold the plate to 90° .

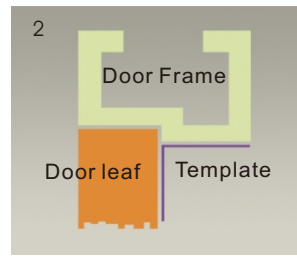


2 Close the door first, then place the upper side of template on door frame, while adjust the left side next to the door leaf.

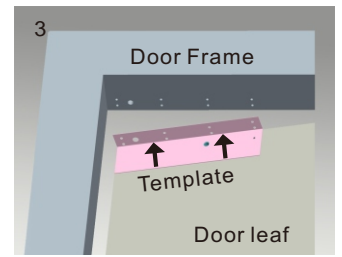


3 Mark screw positions of armature plate and magnetic lock on door leaf and door frame respectively.

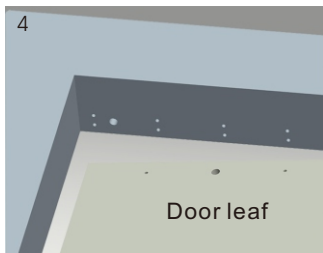


4 Drill holes based on the marked positions.

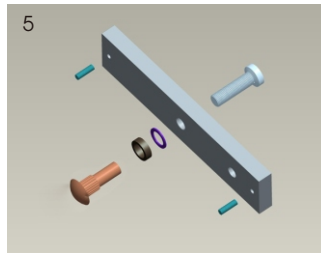


5 Make a combination based on the picture.

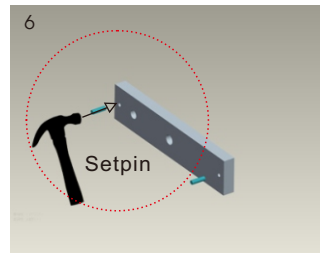


6 Strike the pin into the armature plate slightly (to avoid movement).

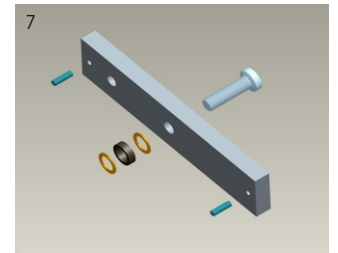


7 Make a combination based on the picture (add washer accordingly). The rubber ring must be added.

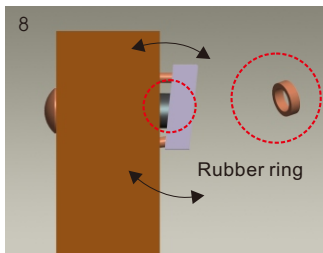


8 Place the rubber ring between armature plate and door leaf.

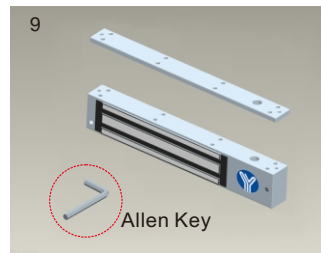


9 Use Allen key to remove the mounting plate from lock body.

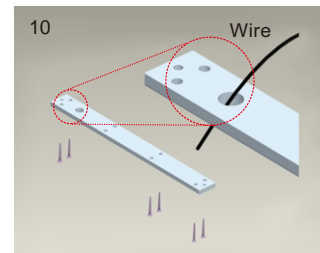


10 Fix the mounting plate on the door frame according to the holes drilled earlier.

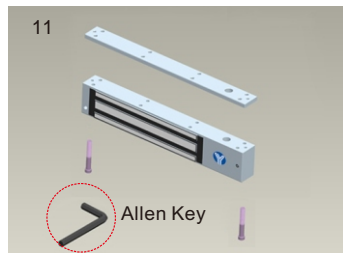


11 Use Allen key to screw the lock body on the mounting plate.

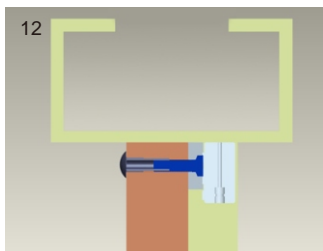


12 Close the door to test holding force. The angle between armature plate and magnetic lock can be adjusted by adding or reducing washers.

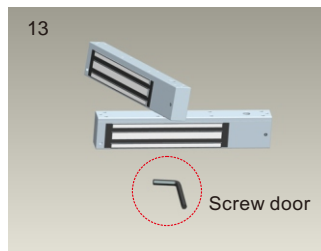


13 After all the appropriate procedures, the holding force can be maximized. Finally, fix the tamper screw.

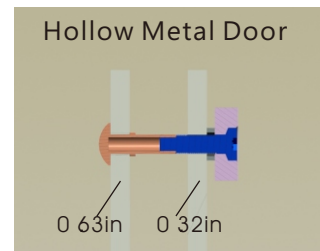

Hollow Metal Door
Drill a hole
Inside: Diameter is 0.32in
Outside: Diameter is 0.63in

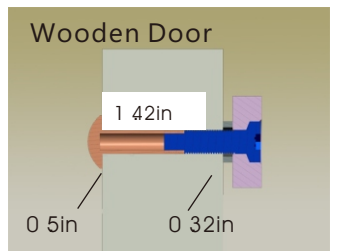

Wooden Door
Drill a hole
Inside: Diameter is 0.32in
Outside: Diameter is 0.5in

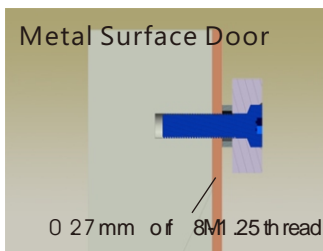

Metal Surface Door
Inside: Drill a hole diameter is 8mm folding the plastic straight pin

Notice:


Thickness of Door Leaf:

350LBS: 1.73in	600LBS: 1.97in
800LBS: 1.89in	1200LBS: 1.81in



Bracket Installation

Different brackets are available according to different types of doors. For example, narrow door , frameless glass door and inward opening door.



L Bracket-For outward opening door
When the door frame thickness is less than 42mm, L bracket is needed.

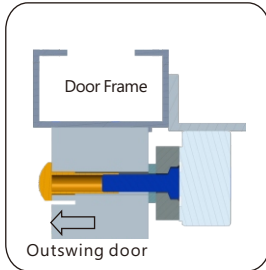


ZL Bracket-For inward opening door
For inward opening door, ZL bracket is needed.

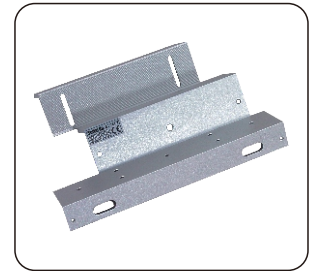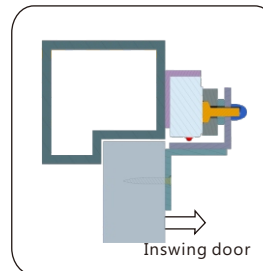


U Bracket
For the frameless glass door. U bracket is needed.

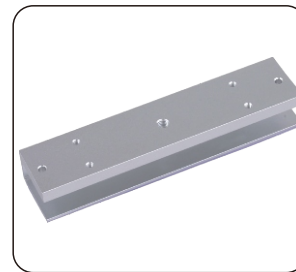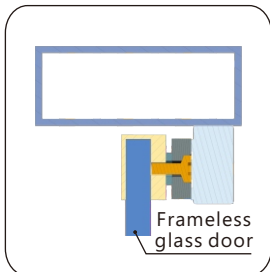


I Bracket for armature plate
When the door frame is too thick, I bracket is needed.

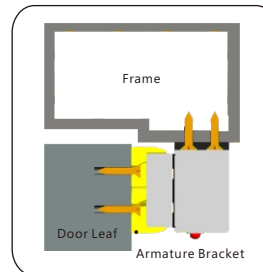


Installation Instruction

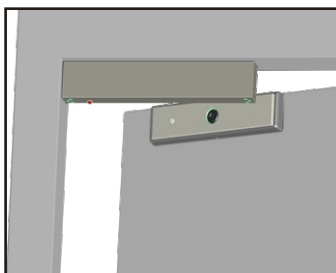


Demonstration of I Bracket Installation

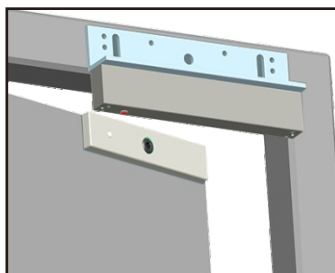

Demonstration of L Bracket Installation

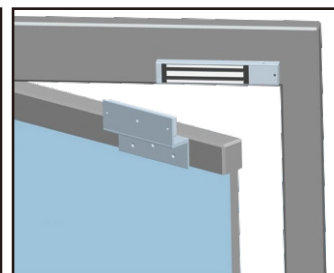

Demonstration of ZL Bracket Installation

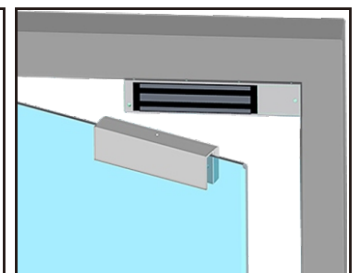

Demonstration of UL Bracket Installation

Circuit Board Diagram

A.12VDC Input:

Required power 0.42Amp(Minimum).

Connect the positive(+)lead from a 12VDC power source to V +.

Connect the ground(-)lead from a 12VDC power source to V -.

Check jumper for 12 VDC operation.


B.24VDC Input:

Required power 0.21Amp(Minimum).

Connect the positive(+)lead from a 24VDC power source to V +.

Connect the ground(-)lead from a 24VDC power source to V -.

Check jumper for 24 VDC operation.

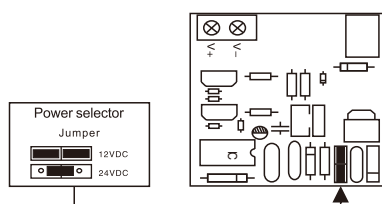

LTKL212 ,LTKL212D

Wire Connection

